
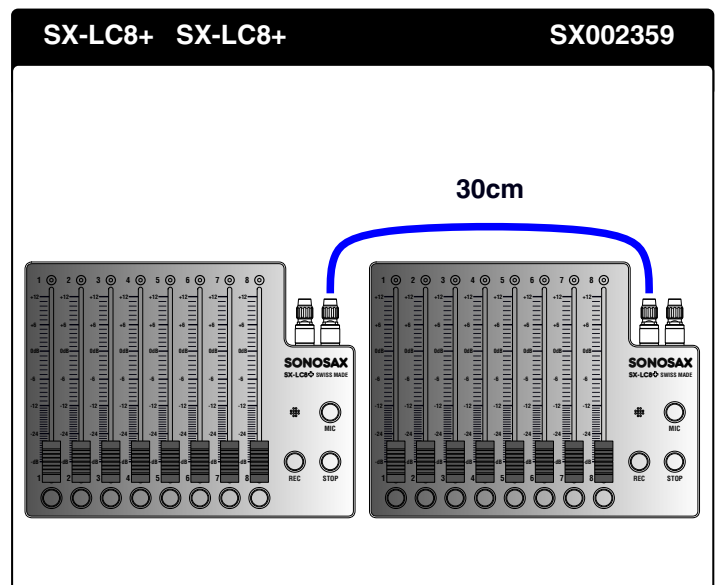
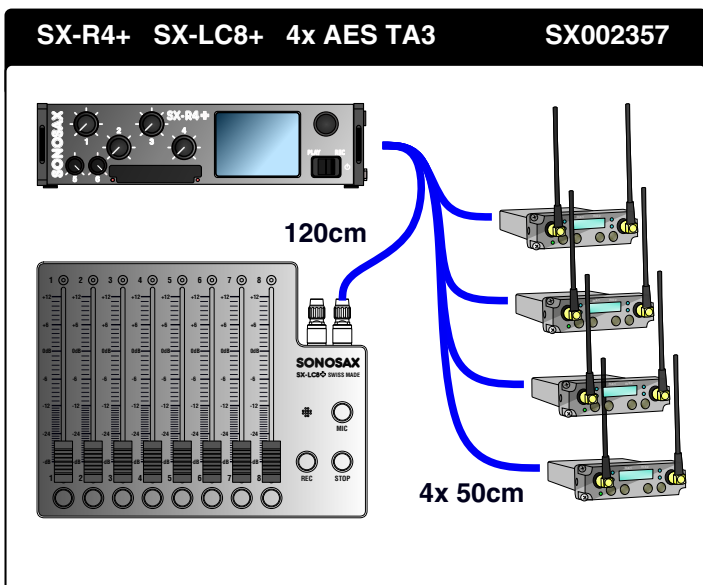
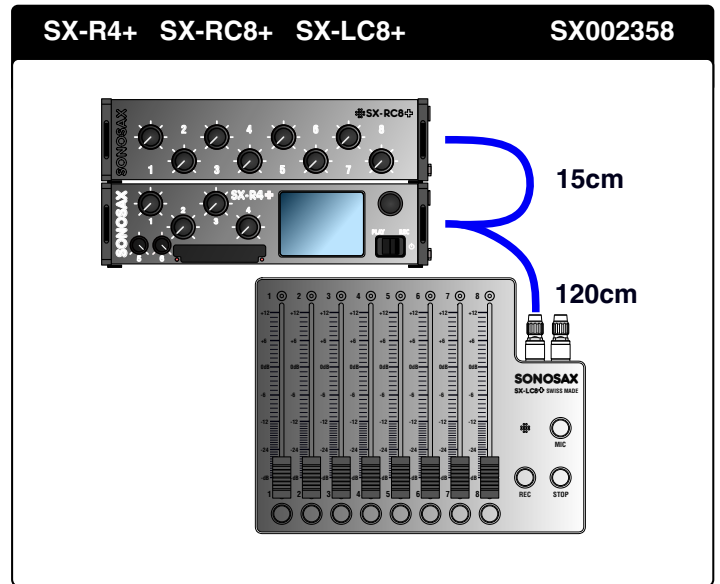
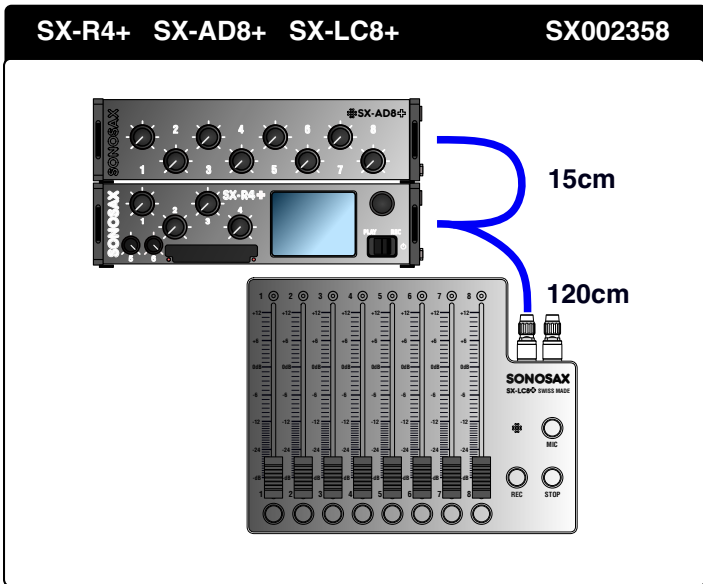
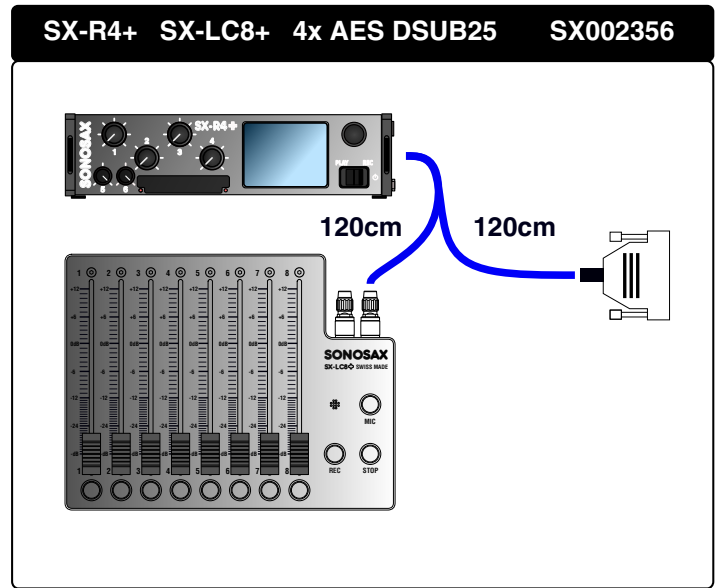



SONOSAX SX-LC8+ CABLES

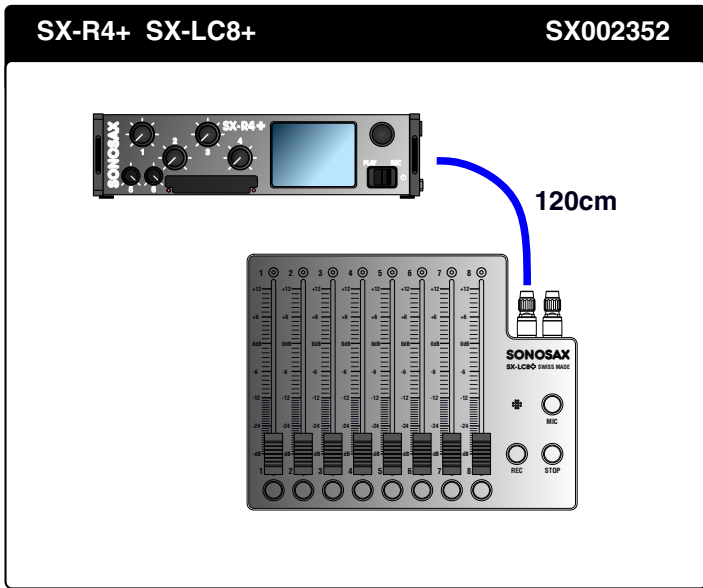

SONOSAX SX-LC8+ USB MIDI


ENABLE MIDI USB MODE

1. PRESS AND HOLD BUTTONS 6 + 7 + 8 AND CONNECT CABLE TO A POWER SOURCE
2. MODE CHANGE IS CONFIRMED BY REC LED BLINKING
3. APPLY A POWER CYCLE

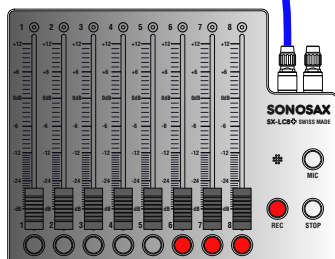

SET BACK TO SX-R4+ (DEFAULT) MODE


1. PRESS AND HOLD BUTTONS 1 + 2 + 3 AND CONNECT CABLE TO A POWER SOURCE
2. MODE CHANGE IS CONFIRMED BY REC LED BLINKING
3. APPLY A POWER CYCLE

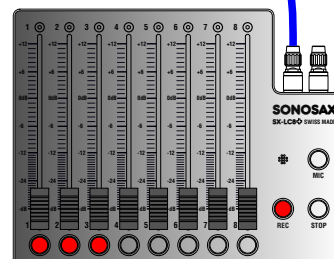

1. ONLY SX-LC8+ FIRMWARE 2.1 OR GREATER IS USB MIDI CAPABLE. THE REC LED WILL NOT BLINK WHEN TRYING TO ENABLE MIDI USB MODE WITH AN OLDER FIRMWARE
2. CONNECT USB CABLE TO THE EXACT BINDER PORT AS ILLUSTRATED
3. SX002303 AES MIC CABLE CAN BE CONNECTED TO ANY BINDER CONNECTOR


SX-LC8+ USB MIDI CABLE

SX002302

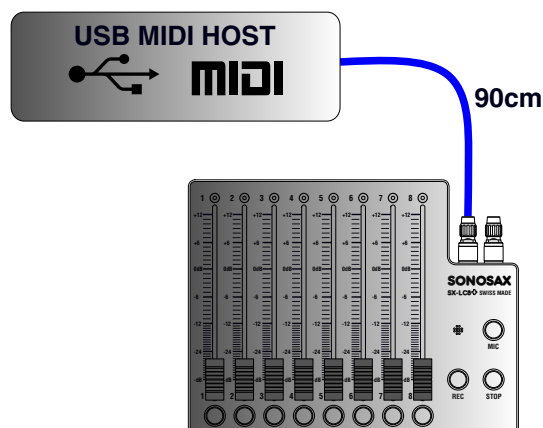

SX-LC8+ AES MIC CABLE

SX002303

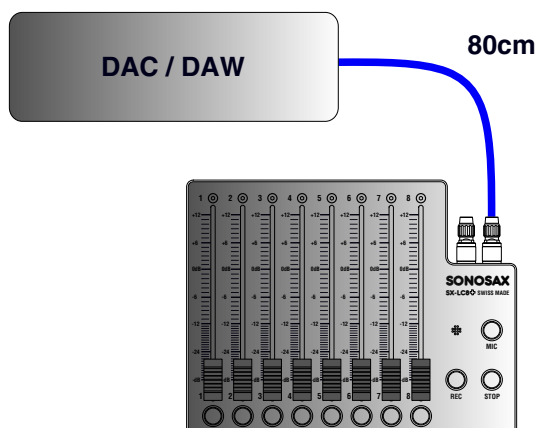

USE MUL. CABLES TO CONNECT MUL. SX-LC8+

