

Audio equipment manufacturer


SAS S.A. Ch. de la Naz 38 CH-1052 Le Mont-sur-Lausanne Switzerland Tel +41 21 651 01 01 Fax +41 21 651 01 09 email sonosax@sonosax.ch website www.sonosax.ch

SX-R4+ Shielding for Dante option card.

Document revision 1.0, February 2021

Shielding the Main board

In order to avoid audio disturbances (glitches) in the transmission between the Dante module and the Main board, we highly advise that you apply the self-adhesive copper shielding strips on the Main board. Please follow the procedure below.

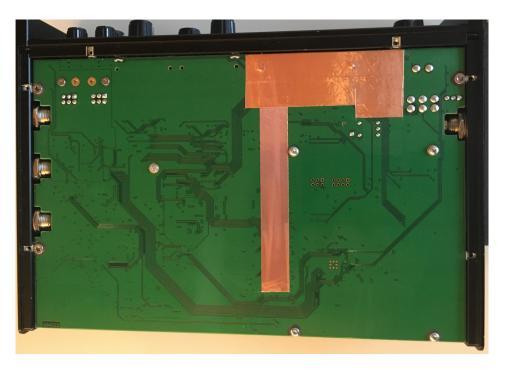


- Remove the cover by unscrewing the 12 screws using a Tork T6 screwdriver. Then slide it through the back of the SX-R4+. If it does not come out easily, slightly loosen the 4 Tork T10 screws placed on both sides of the front panel.
- Remove the paper from the copper strips and glue them as shown in the drawing below.
- Close the unit.

Material: 3M 1181 Tape Copper Foil with Conductive Adhesive (width 12mm)

1x Copper tape length 20mm 2x Copper tape length 65mm 1x Copper tape length 85mm

Main board 064222

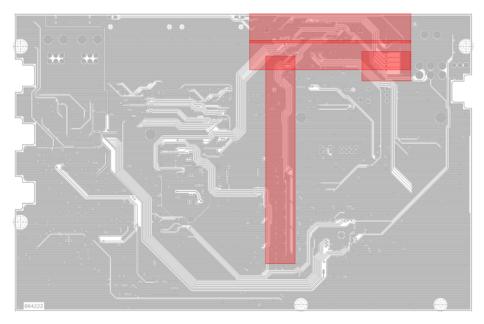

Main board 064223

